

NAGRA ARES-BB⁺ MANUAL

NAGRA®

PROFESSIONAL AUDIO



CONTENTS

Page

1 DELIVERED WITH.....	4
2 INSTALLING THE BATTERIES (NB-BB OPTION).....	4
3 INSTALLING THE FLASHCARD.....	5
4 POWER ON, POWER OFF.....	5
5 CONTRAST.....	5
6 KEYS.....	6
7 FAT / NFS MODE DIFFERENCES.....	6
8 FIRST TIME SWITCH ON.....	7
9 MAIN DISPLAY DESCRIPTION.....	7
10 RECORD (2), REWIND (3), STOP (4), PLAY (5), FORWARD (6), MARK (14) KEYS	8
10.1 RECORD KEY (2)	8
10.2 REWIND KEY (3) AND FORWARD KEY (6).....	8
10.3 STOP KEY (4).....	9
10.4 PLAY KEY (5)	9
10.5 EXTERNAL RECORD OR FADER START COMMAND.....	9
11 LEVEL ADJUSTMENT.....	9
11.1 OUTPUT LEVEL ADJUSTMENT	9
11.2 INPUT LEVEL ADJUSTMENT	9
11.3 THRESHOLD ADJUSTMENT	10
11.4 WHAT IS DBSPL.....	10
12 CENTER & ARROW KEYS.....	11
13 LED MODULOMETER.....	11
14 MAIN MENU.....	11
14.1 DIRECTORY MENU.....	11
14.1.1 HORIZONTAL SCROLLING.....	13
14.1.2 VERTICAL SCROLLING.....	13
14.1.3 QUIT DIRECTORY.....	13
14.1.4 EDIT INDEX.....	14
14.1.5 DELETE.....	17
14.1.6 DELETE TO END.....	17
14.1.7 RENUMBER.....	17
14.1.8 RENUMBER ALL.....	17
14.1.9 DELETE ALL MARKS.....	17
14.2 LOUDSPEAKER.....	17
14.3 TOOLS.....	17
14.3.1 LANGUAGE.....	17
14.3.2 FILE NAMING.....	17
14.3.3 DATE AND TIME.....	19
14.3.4 CARD FORMATTING.....	19
14.3.5 BATTERY TYPE.....	19
14.3.6 PROGRAM SELECT.....	19
14.3.7 CONTRAST.....	20
14.3.8 AUTO POWER OFF.....	20

14.3.9 VERSION.....	20
14.4 TEMPLATES.....	20
14.5 SETTINGS MENU.....	21
14.5.1 INPUT FILTER.....	21
14.5.2 ALC.....	21
14.5.3 ALC THRESHOLD.....	21
14.5.4 ALC REACTION SPEED.....	22
14.5.5 INPUT LEVEL.....	22
14.5.6 BEEP.....	22
14.5.7 FILE FORMAT.....	22
14.5.8 BACKLIGHT.....	22
14.5.9 OUTPUT MODE.....	22
14.5.10 OUTPUT LEVEL.....	22
14.5.11 MS DECODER.....	23
14.5.12 START / STOP CONFIGURATION.....	23
14.5.13 AUTOMATIC SKIP.....	23
14.5.14 RED LED LEVEL.....	23
14.6 AUTO RECORD.....	24
14.7 INPUT.....	24
14.7.1 INPUT TYPE.....	24
14.7.2 48V MIKE POWER.....	25
15 LOCKING THE SETTINGS.....	25
16 LOCKING THE KEYPAD.....	25
17 AUTO POWER OFF.....	25
18 MESSAGES.....	25
19 SOFTWARE UPDATE.....	26
20 MENU TREE ARES-BB ⁺	27
21 INPUTS, OUTPUTS.....	31
21.1 INPUT SIDE.....	31
21.2 OUTPUT SIDE.....	31
22 ARES-BB ⁺ PC SOFTWARE & INSTALLATION (NFS MODE).....	32
22.1 ARES-BB ⁺ SOFTWARE, USING A PC PCMCIA SLOT (NFS MODE)....	32
22.2 ARES-BB ⁺ SOFTWARE, USING A PC USB PORT (NFS MODE).....	32
23 ARES-BB ⁺ PC DRIVERS & INSTALLATION (FAT MODE).....	33
24 FLASH CARDS COMPATIBILITY.....	34
25 LANGUAGES.....	35
26 SPECIFICATIONS.....	43
27 SAFETY/COMPLIANCE.....	44

**This manual describes the use of the ARES-BB⁺ in the FAT mode.
For using the Ares-BB⁺ in the NFS mode, please refer to the previous Ares-P II manual or to the Ares-P / RCX220 manual.**

1 DELIVERED WITH.

1 Jack 6.3 mm (90 degrees) connector, 1 USB cable, 1 CDR with Ares Import, Digigram import software and manuals.


2 INSTALLING THE BATTERIES (NB-BB OPTION).

On the rear side of the machine, loose the 2 “thumb” screws until the battery box can be removed. To open the battery compartment, slide the inner cover until it is fully open. If dry cells are used verify that the battery compartment switch is in the OFF position. Install the 6 “AA” cells observing the polarity and replace the inner cover. Lock the battery compartment back to the machine.

Batt. Type	Capacity	Charging time	Record mode	Manufactory
NimH	1300 mAh	4h30	5h30	GP
NimH	2300 mAh	8h00	11h35	Sanyo
Li-Ion	2400 mAh	8h30	12h30	Saft
Dry cells		x	12h50	Panasonic, Alkaline

Note:

If the batteries make a noise (due to the Ø tolerances) when the housing is shaken, glue the added Mylar sheet as indicated in the picture and insert the batteries as shown.

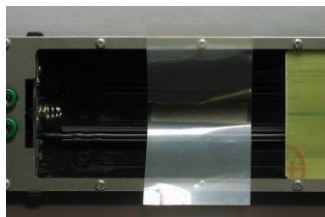

Important note:

In the tools sub-menus select the corresponding type of battery pack (AA cells or Li-ion)

When using the external power supply, check that the switch on the battery compartment is set to “OFF” before installing dry cells.

In the OFF position, the charger circuitry is not activated and if an external power supply is connected, the machine will run from external supply and not from the batteries.

When an external power supply is connected to the Ares-BB⁺, the green led turns on. During charge, the yellow led turns on. The Ares-BB⁺ charges with approx. 300 mA. Charging stops automatically (yellow led turns off). If the yellow led never turns off, it means that one or more cells are defective. If the charger switch is turned on and no batteries are installed while the machine receives external power, the yellow led starts blinking fast.

3 INSTALLING THE FLASHCARD.

Insert the flashcard on the right side of the machine and push it fully home (eject button fully out). Compact flash cards must be installed using an adapter.

NOTE: The software version, for the Ares-BB[®] allows, ATA cards, compact flash cards and Micro-drive cards. Linear flash cards and Strata flash cards can only be used in the NFS mode (Nagra File Format).

Important note:

When running the machine in the FAT mode, only ATA, Compact flash cards and Micro-drive cards can be used.

4 POWER ON, POWER OFF.

Press the "**POWER ON**" button (1) for 1 second and the machine switches on. To switch "**OFF**" the machine push the same button again for 1 second. Once the main display is shown, the type of selected file system and file format are shown briefly. To re -indicate the selected file format, press the "**POWER**" key (1) briefly at any time. (Ex. PCM 48k 16b st).

Attention: the machine cannot be switched OFF during RECORD or EDITING.

5 CONTRAST.

If the display contrast is not set properly at power on, switch off the machine, keep the "**RIGHT**" arrow key (12) pressed while turning on the machine. This brings the machine directly to the contrast menu. Adjust step-by-step with the "**UP**" (9) or "**DOWN**" (11) arrow keys to increase or decrease accordingly. Once the correct contrast is found, press the "**CENTER**" key (13) to store the new setting in the machine. Press the "**LEFT**" arrow key (10) to quit the menus. The factory setting has the value "32".

6 KEYS.



1	Power ON / OFF	9	Up arrow key or increase output level key
2	Record, Marker key	10	Left arrow key
3	Rewind, skip backwards key	11	Down arrow key or reduce output level key
4	Stop key	12	Right arrow key
5	Play key	13	Other menu or execute key
6	Forward, skip forwards key	14	Mark key
7	Reduce input sensitivity or playback level key	15	Keypad lock
8	Increase input sensitivity or playback level key		

7 FAT / NFS MODE DIFFERENCES.

The **"FAT"** mode means that the ATA or Compact flash card is formatted according to the FAT standard (FAT 16 or FAT 32) and is directly compatible with a Windows or Mac O/S. The **"NFS"** mode means that the card is formatted with a Nagra format (Nagra File System), in order to remain compatible with previous machines such as the Ares-C, C-PP, Ares-P or RCX220. To read a card formatted NFS in a PC, additional PC software is needed.

If no software options are installed, the card will be formatted **"FAT"** and via the USB port, Windows or Mac O/S will recognize the machine as an external hard disk. The recorded files are Broadcast Wave Format (xxx.wav). Only PCM linear can be recorded (not compressed). Only ATA or Compact flash cards can be used in the **"FAT"** mode.

If equipped with the software option #I, the machine emulates an ARES-P (NFS mode) and allows MPEG compressed files to be recorded in both the FAT or NFS modes. In the **"NFS"** mode, the maximum bit rate is 192kb/s, in the **"FAT"** mode, the maximum bit rate is 384kb/s.

If equipped with software option #I & #II, the machine also emulates an RCX220. This means that through the USB port, Windows recognizes the machine as an external soundcard when in **"NFS"** mode and as an external removable hard drive in the **"FAT"** mode.

Important note: When making linear recordings (WAV) the range of media that can be used is restricted. The card must be capable of writing data at high speed. A stereo recording at 48kHz requires a data rate of $2 \times 24 \text{ bits} \times 48000 \text{ sampling frequency} \div 8 \text{ bits per Byte}$ gives a data rate of 288 kBytes per second.


8 FIRST TIME SWITCH ON.

Verify first that the keypad lock switch (15) is in the left position. Once the batteries have been installed and turning on, the machine will switch on in the "FAT" mode. The display will show a picture of a cylinder with the word "FAT" for several seconds.

If the words "Nagra File System" appear (only if minimum the soft #1 package is included) jump to page 17 Paragraph 14.3.3 PROGRAM SELECT before continuing.

9 MAIN DISPLAY DESCRIPTION.

Attention: At power on, the display below is shown, but without the level bargraph indicator on the right-hand side. This bargraph appears when the "+" or "-" button (8 or 7) is pressed. It disappears after a few seconds to improve the clarity of the display.

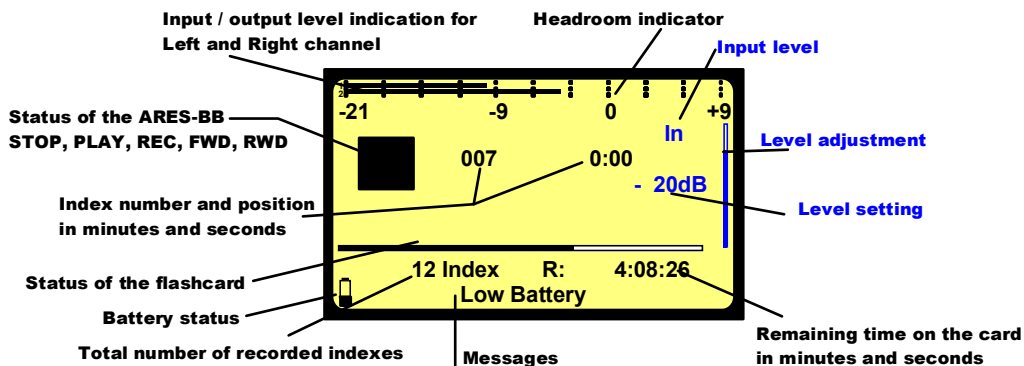

Status of the ARES-BB⁺



"STOP"
"RECORD"
"PLAY"
"SEARCH FORWARD"
"SEARCH BACKWARD"

ARES-BB⁺ is in STAND BY mode
ARES-BB⁺ is in RECORD mode
ARES-BB⁺ is in PLAY mode
ARES-BB⁺ is playing fast forwards
ARES-BB⁺ is playing fast backwards

Take / Index number and position in minutes and seconds

This is the physical playback position. The example shows that playback will start at the beginning of Take / Index 7 (0 minutes, 0 seconds).

Status of the flashcard

The full length of the bargraph corresponds to the total memory of the inserted flashcard. The black area shows how much memory was already used for recording. The clear area shows the remaining memory.

Total number of recorded Takes / Indexes

This area shows the total number of Takes / Indexes already recorded on the flashcard.

Remaining time on the card in minutes and seconds

This indicates how much recording time is left on the card. In this example, it shows 4 hours 8 minutes, 26 seconds. If the bit-rate is changed, it will automatically be updated. Example 4:8:26 if 128kb/s was set, it will become 8:16:52 if the bit-rate was changed to 64kb/s.

Input / output level indication for Left and Right channel

In the stereo mode, bargraph 1 corresponds to the left channel and 2 to the right channel. In mono mode, both bargraphs indicate the input / output level. From 0dB, the bargraph shows the headroom up to +9dB. +9dB corresponds to "FF" for the AD converter.

Messages

This is the area for messages, such as "**LOW BATTERY**", "**CARD FULL**" etc.

A beep in the headphones corresponds to an arrival of a message on the display.

When pressing shortly the "**POWER**" key, the message area will show the file format selected for recording.

Battery status

When the battery icon shows full, it indicates the batteries are charged. When the voltage drops below the first internal reference, a warning beep is heard in the headphones and the message "**LOW BATTERY**" appears in the display. When the voltage drops below the second internal reference, the machine automatically switches off.

When the battery icon disappears during a USB connection in the "FAT" mode, it means that the machine is powered by the PC and not anymore by the internal batteries or external power supply.

Level Adjustment

This bargraph only appears on the screen during the adjustment of the input sensitivity, the output level or the ALC threshold adjustment. If no adjustment is made it will disappear after a few seconds. Simultaneously, the level setting in dB's as well as the kind of adjustment "**IN**", "**OUT**" or "**THR**" will appear on the display.

10 RECORD (2), REWIND (3), STOP (4), PLAY (5), FORWARD (6), MARK (14) KEYS

10.1 RECORD KEY (2)

To start recording, the "**RECORD**" key (2) can be pressed, even if the machine was in "**PLAY**" mode or is in one of the sub-menus. The "**RECORD**" key will not work if the machine is formatting the card. If during record the "**RECORD**" key is pressed again, a new Take / Index is automatically created.

During record or play, the "**MARK**" key (14) can be pressed on the fly.

Important: Those marks can be used on an external editing system (Dalet, Netia, Digas, VCS etc.) and are also used as cut positions on the internal editing system of the ARES-BB⁺ (Option #3).

During record, the front red LED turns ON.

During record, the "**POWER**" (1) key as well as the "**REWIND**" (3), "**PLAY**" (5) and "**FORWARD**" (6) keys are disabled.

10.2 REWIND KEY (3) AND FORWARD KEY (6) SKIP.

These keys have two functions called "**SKIP**" backwards or forwards and "**REWIND**" or "**FORWARD**".

To jump index-by-index, pressing briefly on the "**REWIND**" (3) or the "**FORWARD**" (6) keys will decrement or increment the index position.

To jump index-by index, pressing briefly the "**REWIND**" (3) or the "**FORWARD**" (6) keys followed by holding the same key will fast decrement or increment the index position.

IMPORTANT: Only indexes with the same sampling frequency as the current settings of the machine can be played back using the SKIP keys. All other indexes with a different sampling frequency cannot be selected.

If the recording contains "**MARKS**" then these keys will jump to the next (or previous) mark position.

FORWARD SEARCH & BACKWARD SEARCH.

This function can be executed in **"STOP"** or **"PLAY"** mode. Once the **">>"** or **"<<"** key is pressed for more than 0.5 seconds, the machine starts **"FORWARD or BACKWARDS SEARCH"** at 4 times nominal speed. The longer the button is pressed, the search speed increments up to 128 times nominal speed. When the button is released, the search stops and it returns to its previous function (STOP or PLAY).

10.3 STOP KEY (4)

When this key is pressed during record or playback, the machine stops recording or playing and returns to the **"EE"** mode.

The **"EE"** mode means that the input signal is fed to the output. This button can also be used as the **"PAUSE"** key during playback.

10.4 PLAY KEY (5)

After a record session pressing the **"PLAY"** key, immediately plays back the last recorded Take / Index.

10.5 EXTERNAL RECORD OR FADER START COMMAND

On the right side of the machine, a mini jack connector (mono 3.5 mm) is present called **"START / STOP"**. Depending on the selection made in the menus, if the mini jack input is grounded, the record or playback starts, if open, the record or playback stops.

11 LEVEL ADJUSTMENT

11.1 OUTPUT LEVEL ADJUSTMENT

During the **"STOP"** or **"RECORD"** mode, the output level can be adjusted by the **"UP ARROW"** key (9) to increase or the **"DOWN ARROW"** key (11) to decrease. Once one of these keys is pressed, an additional bargraph on the right side of the display appears, indicating **"OUT"**, showing the current position of the adjustment. **"0dB"** corresponds to maximum output level, **"-59dB"** corresponds to minimum output level and **"OFF"** corresponds to mute of the output signal.


The setting of the output level can also be stored in the machine in such a way that every time the machine is switched ON, it will take the same **"DEFAULT LEVEL"** output adjustment (See **"SETTINGS MENU, OUTPUT LEVEL"**). During the **"PLAY"** mode, the output level can be adjusted either by the **"UP & DOWN ARROW"** keys (9 & 11) or the **"+"** and **"-"** keys (8 & 7).

11.2 INPUT LEVEL ADJUSTMENT

During **"STOP"** or **"RECORD"**, the input level can be adjusted by pressing the **"+"** (8) or **"-"** (7) keys to increase or decrease the input sensitivity. Once one of these keys is pressed, an additional bargraph on the right side of the display appears, indicating **"IN"**, corresponding to the current setting. **"74dB"** corresponds to maximum input gain, **"133dB"** corresponds to minimum input gain and **"OFF"** corresponds to muting of the input signal. If the input sensitivity is adjusted for **"74dB"**, it means that if the input signal at 74dB SPL will be recorded at a 0dB level.

Level Adjustment in the stereo mode

When in the sub menus the "INPUT TYPE" is set to "STEREO", the left and right channel can be adjusted separately. Holding the left arrow key (10) and adjusting the input sensitivity will only adjust the left channel. Holding the right arrow key (12) and adjusting the input sensitivity will only adjust the right channel. When the input sensitivity between the 2 channels is not identical, the display will automatically show both input sensitivity levels.

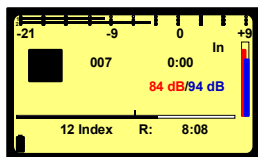

As shown on the picture, the red indications correspond to the left channel, the blue indications correspond to the right channel. If no left or right arrow is pressed during the input sensitivity adjustment, both channels will be adjusted simultaneously and keep the same delta until one of the channels is reaching max. or min. level.

11.3 THRESHOLD ADJUSTMENT

If "ALC" (Automatic Level Control) is "ON" and the "ALC THRESHOLD" is set to "USING +/- KEYS" (see SETTINGS MENU, ALC THRESHOLD), the threshold during "RECORD" or "STOP" can be adjusted by pressing the "+" or "-" keys (8 or 7). Once one of these keys is pressed, an additional bargraph on the right side of the display, indicating "THR" appears, showing the current position of the adjustment. "74dB" corresponds to maximum threshold level, "104dB" corresponds to minimum threshold level.

The "THRESHOLD" adjustment permits selection of the size of the compression zone. It is the lower limit setting of the zone that will be automatically amplified during a silent period. The "ALC" works in a range of 42dB (from 74dB to 116dB). If the "THRESHOLD" is set to 104dB, signals of 104dB and higher (max. 116dB) will be recorded at 0dB level (between -2dB and -6dB for a stable signal). A signal of 90dB will be recorded at -14dB (104dB - 90dB).

11.4 WHAT IS DBSPL

The term "dB SPL" is the unit used to indicate the power of ambient sound. "dB" is the abbreviation of decibels (ten bels), which is the logarithmic ratio of a signal versus a reference level. "SPL" indicates the reference level and stands for "Sound Pressure Level". The reference level is an air pressure of 20 micropascal (0.00002 Pa = 0 dB SPL).

Some indicative values:

- 30-40 dB SPL : ambient room noise / whispering
- 50-70 dB SPL : normal conversation
- 80-90 dB SPL : feature film soundtrack in a theater
- 90-110 dB SPL : busy bar with live music (Swiss legal max is 110 dB in a public arena)
- 110-120 dB SPL : heavy rock concert
- 130-140 dB SPL : Threshold of pain for the human ear

If the gain of the microphone is correctly set, the ARES-BB⁺ could be used as a sonometer. The value indicated by the modulometer of the ARES-BB⁺ is the peak value (dB SPL_{peak}). The peak value is typically 10 dB higher than the RMS (Root Mean Square) value.


Examples:

Input attenuation set to 90dB, modulometer shows 0dB, this means that the sound has a pressure level of 90dB SPL_{peak} ≈ 80 dB SPL.

Input attenuation set to 74dB, modulometer shows -12dB, this means that the sound has pressure level of (74 - 12) 62dB SPL_{peak} ≈ 52dB SPL

Finally, if you know that you are going to make a recording of a sound level of 90 dB SPL (100 dB SPL_{peak}) then you can pre-adjust your machine by setting the level pot to the 100 db position and in this way, your recording will not overload and you will record at about 0 dB on the modulometer.

12 CENTER & ARROW KEYS

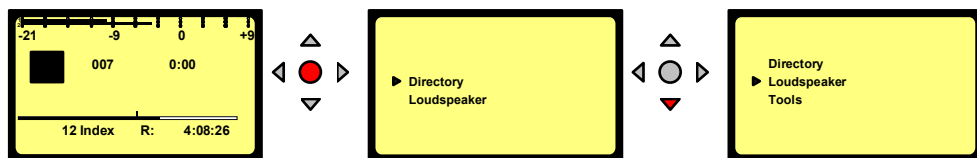


By pushing the “**CENTER**” key (13), the machine gives access to the “**DIRECTORY**”, “**LOUDSPEAKER**”, “**TOOLS**”, “**TEMPLATES**”, “**SETTINGS**” etc. sub-menus. Using the “**ARROW**” keys (9 to 12), you navigate between those sub-menus. To move back to the initial display, press the “**LEFT ARROW**” key (10) (except in the “**DIRECTORY**” where “**CENTER**” key (13) needs to be pressed first to return to the sub-menus).

13 LED MODULOMETER

The LED modulometer shows the sum of both channels when the machine is set to Stereo operation. The three leds give a quick visual indication in three colours, green, yellow and red. They light at levels of - 21, -9 and standard 0 dB respectively. Normal operation is with the green and yellow led on and the red led flashing occasionally on signal peaks. In the sub-menus, the red led reference can be set to 0, +3, +6 or +9 dB.

14 MAIN MENU.

By pressing the “**CENTER**” key (13), the main menu appears on the display.

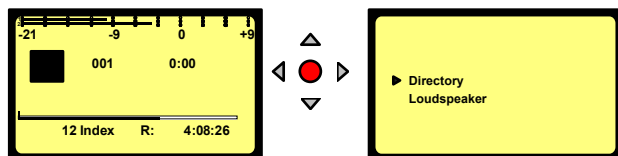

The “**DIRECTORY**” gives access to all the information of the recorded files on the flashcard.

If “**TOOLS**” is selected, other sub menus can be selected: “**FILE NAMING**”, “**DATE & TIME**”, “**CARD FORMATTING**”, “**PROGRAM SELECT**”, “**CONTRAST**” and “**VERSION**”.

If “**SETTINGS**” is selected, several other sub-menus can be selected such as: “**OUTPUT LEVEL**”, “**INPUT FILTER**”, “**BEEP**” and “**FILE FORMAT**” etc.

Scrolling through the different sub-menus is done by pressing the “**DOWN ARROW**” (11) or “**UP ARROW**” (9) keys.

Escaping from the sub-menus is done by pushing the “**LEFT ARROW**” key (10).

Entering a sub-menu is done by pushing the “**RIGHT ARROW**” key (12) or the “**CENTER**” key (13).

Inside a sub-menu, execute the selected setting by pressing the “**CENTER**” key (13).

14.1 DIRECTORY MENU.



By using the **“UP”**, **“DOWN”**, **“LEFT”**, **“RIGHT ARROW”** keys (9, 11, 10, 12), once **“DIRECTORY”** has been selected, it becomes possible to scroll vertically and horizontally to view all the recorded indexes and their specifications.

If the marker has a **“▶”** shape, it means that the index sampling frequency is the same as the current settings of the machine. When in this case, the **“PLAY”** key (5) is pressed, the playback starts immediately. If the **“STOP”** (4) key is not pressed at the end of the playback of this selected index, the playback continuous on the next index that has the same sampling frequency as the previous selected index.



If the marker has a **“>”** shape, it means that the index sampling frequency is different from the current settings of the machine. When in this case the **“PLAY”** key (5) is pressed, the default sampling frequency of the machine will be momentary changed to the new selected sampling frequency and the playback starts. If the **“STOP”** (4) key is not pressed at the end of the playback of this selected index, the playback continuous on the next index that has the same sampling frequency as the previous selected index. In this case, once the **“STOP”** (4) key is pressed or the playback of the last found index with the same sampling frequency is ended, the machine will after a moment return to his default sampling frequency setting.

During the period that the **“DIRECTORY”** is on the display, all function keys **“PLAY”**, **“STOP”**, **“FWD”** and **“RWD”** (3,4,5 &6) are active.

If the **“RECORD”** button (2) is pressed, the display returns to the main screen and the recording starts.


14.1.1 HORIZONTAL SCROLLING.

Use the "LEFT" (10) and "RIGHT" (12) "ARROW" keys.

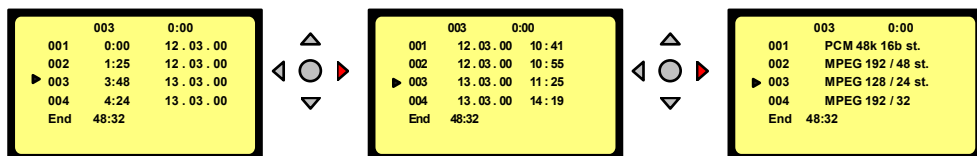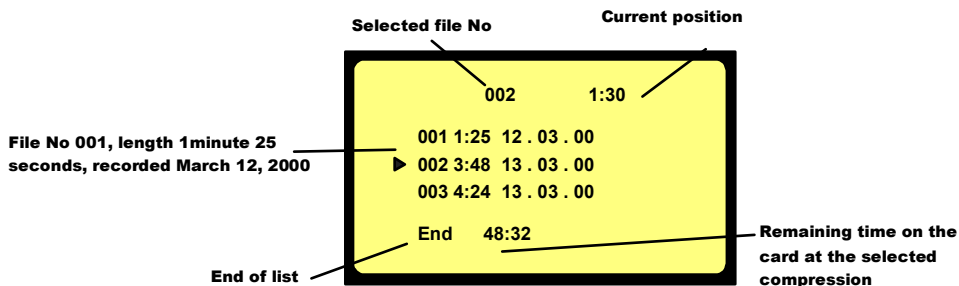

The display shows the length, the date of recording, the time at the record start and the type of file format.

14.1.2 VERTICAL SCROLLING.

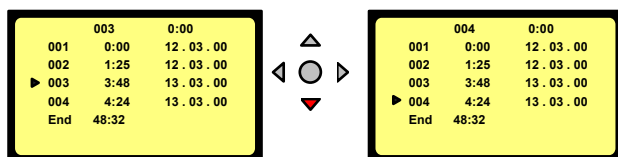

Pushing the "UP" (9) or "DOWN" (11) "ARROW" keys makes the vertical scrolling.

14.1.3 QUIT DIRECTORY.

To escape from the "DIRECTORY", press the "CENTER" button (13) once followed by the "RIGHT" arrow key (12). The display returns to "STATUS" display.




14.1.4 EDIT INDEX.

003	0:00	
007	0:00	12 . 03 . 00
008	1:25	12 . 03 . 00
▶ 009	1:23	13 . 03 . 00
010	1:21	13 . 03 . 00
End	48:32	

The editing option enables the cleaning-up of an index that contains periods of silence or noise and non useful sound. Once the editing is completed, the index will be saved as a new index. In the directory such edits will be marked with a "scissors" icon.

To edit an index, first select the index to be edited from the "**DIRECTORY**", press the "**CENTER**" key (13), select "**EDIT INDEX**" and press the "**CENTER**" key (13) again.

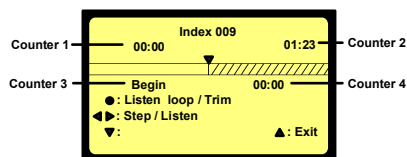

Counter 1 indicates the play position inside the edited index.

Counter 2 indicates the full length of the edited index.

Counter 3 indicates the reel play position from the start of the original index.


Counter 4 indicates only the position of each cut from the original index.

In this example, index 009 is selected and is shown as a tape. All edit commands are executed as shown in the picture by the "**LEFT**" (10), "**RIGHT**" (12), "**UP**" (9), "**DOWN**" (11) and "**CENTER**" (13) keys.

In addition, in the edit mode, the standard keys "**REWIND**" (3), "**STOP**" (4), "**PLAY**" (5) and "**FORWARD**" (6) act in the same way as for the standard play mode. The "**REWIND**" (3) as well as the "**FORWARD**" (6) key permits to skip from one cut position to another.

If markers were already present on the index, they will be shown as cut positions on the tape.

PLACING CUTS

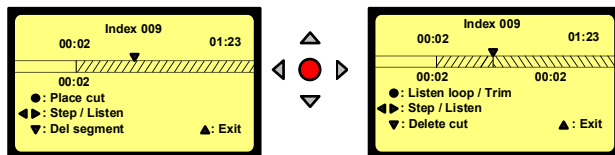


Example: Index 009 played back for 2 seconds and a first cut position was made.

This can be made in 2 different ways. The first possibility is to "drop" them on the fly. Push the "**PLAY**" key (5) and press the "**CENTER**" key (13) every time a cut position must be set.

The second possibility is to press and hold the "**RIGHT**" key (12). The machine goes in play mode until the key is released. If the "**LEFT**" key (10) is pressed and hold, the machine goes in play reverse. Once the key released, press the "**CENTER**" key (13) to show a cut position.


DELETING A CUT POSITION

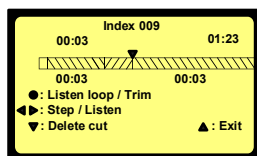

Example: A second cut position was set at 3 seconds "**DELETE CUT**" appears on the screen.

If a cut position needs to be removed, it can be done in 2 ways. The first is to use the skip function with the "**REWIND**" (12) or "**FORWARD**" (10) key until the cut position is found and press the "**DELETE CUT**" key. The second one is by using the "**LEFT**" (10) or "**RIGHT**" (12) key kept pressed to approach the cut line to the play head followed by a step by step approach until the counter 4 indicates the position. Once the positioning is reached, press the "**DOWN**" key (11) to delete the cut.


DELETING A SEGMENT

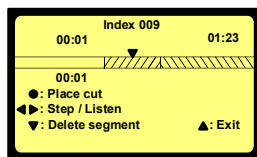

Example: Index 009 was rewound for 1 second. The play position sits between the start position and the first cut position. **"DELETE SEGMENT"** appears on the screen

When pressing the **"DOWN"** key (11), the segment from the beginning until the 2 seconds point will be deleted.


UNDO A CUT OUT

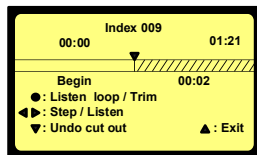

Example: The segment from the beginning until 2 seconds is cut out. **"UNDO CUT OUT"** appears on the screen.


If a wrong segment was cut out, it can be re-inserted by positioning the "tape" so that the play position is on top of the cut position. This can be done in 2 ways. The first is to use the skip function with the **"REWIND"** (3) or **"FORWARD"** (6) key until the cut position is found. The second is by using the **"LEFT"** (10) or **"RIGHT"** (12) key kept pressed to approach the cut line to the play head followed by a step by step approach until the counter 4 indicates the position. Once the positioning is reached, press the **"DOWN"** key (11) to undo the cut out.

TRIMMING CUTS

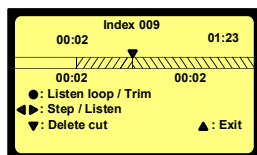


Example: The first cut position is placed below the play position indicator. **"LISTEN LOOP/TRIM"** appears on the screen

Once the first cut position is made and the playback position sits on that cut position, press the **"CENTER"** key (13) once again and the editor starts a loop playback around the cut position. It starts playing 1second before the cut position and continues to play 1 second after the cut position.

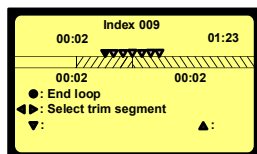

Example: The play starts from 1 second until 3 seconds **"SELECT TRIM SEGMENT"** appears on the screen.


During the playback loop, the **"LEFT"** (10) or **"RIGHT"** (12) key permits to select the left or right segment to be trimmed. This means that the length of the selected left or right segment can be reduced.

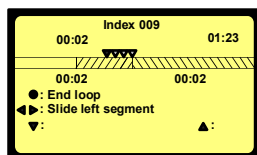

Example: The left segment is selected. **"SLIDE LEFT SEGMENT"** appears on the screen.

In this case, the playback loop starts 1 second before the cut position and ends at the cut position. The length of the left segment can now be reduced by pressing and holding the **"LEFT"** key (10) or step by step by clicking the same key. In this case the audio will be reduced with a size between 50 and 100 ms. If the reduction was too great, it can be increased again back to the original length by pressing the **"RIGHT"** key (12).



EXIT THE EDITOR

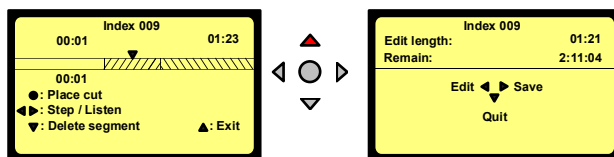

To exit the editor, press the **"UP"** key (9).

The display permits to select **"SAVE"** (12), **"QUIT"** (11) or return to **"EDIT"** (10).


Pressing **"SAVE"** (12) shows the next displays

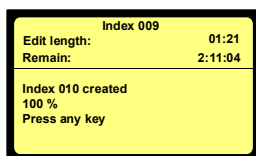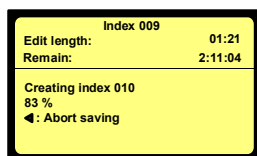

The saving started and it is still possible to **"ABORT"** (10).

Once the right display appears, the new file was created. The created index number is always the highest existing index number in the directory +1.

Note: If the directory is full (999 indexes) a warning will appear at the start of the editing.

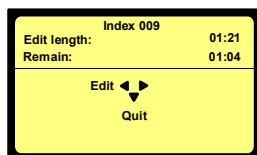

If the remaining time on the card is shorter than the selected index length, a new window will appear but without the **"SAVE"** possibility. It is up to the user if he thinks that once the index is edited, the size will be smaller than the remaining time. In this case the **"EDIT"** can be selected.

In this example, the full length of the original index is 1 minute 21 seconds, but only 1 minute and 4 seconds remaining time is left, so the final edit must be smaller than this.

Maximum 100 cut positions can be entered on 1 index.

During editing the **"POWER"** key (1) is disabled. If during editing, the machine switches off due to low battery voltage, the new index will not be saved. If during saving the edited index, the machine switches off due to low battery voltage, the saving will be aborted.

During editing the **"AUTO POWER OFF"** function is also disabled as long as the index has not been saved. In the case that the saving was aborted, the **"AUTO POWER OFF"** will stay disabled. In the case the file was saved correctly, **"AUTO POWER OFF"** becomes enabled.

14.1.5 DELETE.

Any file or index from the directory can be deleted without influencing other takes. To do so, in the directory, select the index to be erased, press the “**CENTER**” key (13), select “**Delete index**” and confirm.

14.1.6 DELETE TO END.

Erase the selected index and all indexes after until the end of the card.

14.1.7 RENUMBER.

Permits after deleting indexe(s) to renumber the files from the selected file until the end of the card.

14.1.8 RENUMBER ALL.

Permits after deleting indexe(s) to renumber all the files from file 1 until the end of the card.


14.1.9 DELETE ALL MARKS.

Permits to remove all markers from the selected index made during record or play.


14.2 LOUDSPEAKER.

This switches “ON” or “OFF” the internal loudspeaker.

NOTE: The internal loudspeaker can only be used in the playback mode.

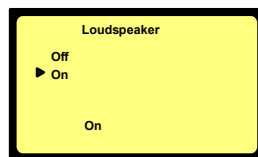


14.3 TOOLS.

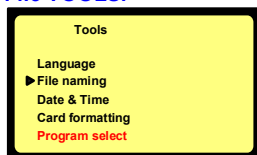

Several sub-menus are available.


NOTE: If option #1 is not installed, “**PROGRAM SELECT**” will not appear.

14.3.1 LANGUAGE.

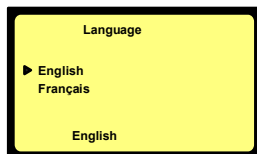


The “**LANGUAGE**” sub-menu allows selection of the desired language for all text appearing on the display of the machine.

14.3.2 FILE NAMING.

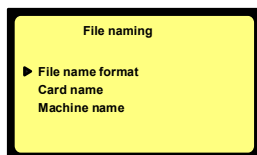

The “**FILE NAMING**” sub-menu determines the way the name of the recordings will be defined and stored on the card. It is possible to select the “**MACHINE NAME**” or the “**CARD NAME**” combined with “**DATE**” or “**TIME**”.

14.3.2.1 FILE NAME FORMAT.

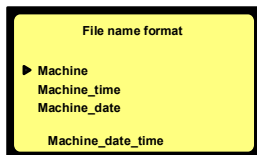


Several combinations are available:

In the following examples, the machine name is "ABC" and the card name is "DEF".

- **Machine:** Only the machine name followed by the index number (Ex. ABC001).
- **Machine_time:** The machine name followed by the time and the index number (ex. ABC182035_002).
- **Machine_date:** The machine name followed by the date and the index number (ex. ABC20050701_003).
- **Machine_date_time:** The machine name followed by the date, time and the index number (ex. ABC20050701_182035_004).
- **Card:** Only the card name followed by the index number (Ex. DEF005).
- **Card_time:** The card name followed by the time and the index number (Ex. DEF182540_006).
- **Card_date:** The card name followed by the date and the index number (Ex. DEF20050701_007).
- **Card_date_time:** The card name followed by the date, time and the index number (ex. DEF20050701_182035_008).

14.3.2.2 CARD NAME.

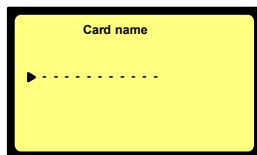


The "**CARD NAME**" corresponds to the volume label. The "**CARD NAME**" menu permits to add up to 11 characters or numbers to the file name before the index number. The index number in the file name is the last 3 digits and is automatically incremented by the machine (nnn: min. 001, max. 999). To enter the card name, press the "**CENTER**" (13) key once and the first character starts blinking. By using the "**UP**" (9) or

"**DOWN**" (11) arrow key, select the corresponding character or number. Pressing the "**RIGHT**" (12) arrow key or the "**CENTER**" (13) key selects the next character position. Once the eleventh character is selected press first the "**CENTER**" (13) key or "**RIGHT**" (12) key to validate the last character position. To escape from the menu, press the "**LEFT**" (10) key. If less than 11 characters are used, select the symbol ↵.

Note: If the card is reformatted, the card name must be re-introduced.


14.3.2.3 MACHINE NAME.

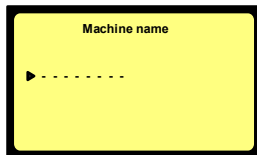

The "**MACHINE NAME**" menu permits to add up to 8 characters or numbers to the file name before the index number. To do so, press the "**CENTER**" (13) key once and the first character starts blinking. By using the "**UP**" (9) or "**DOWN**" (11) arrow key, select the corresponding character or number. Pressing the "**RIGHT**" (12) arrow key or the "**CENTER**" (13) key selects the next character position. Once the eighth

character is selected press first the "**CENTER**" (13) key or "**RIGHT**" (12) key to validate the last character position. To escape from the menu, press the "**LEFT**" (10) key. If less than 8 characters are used, select the symbol ↵.

14.3.3 DATE AND TIME.

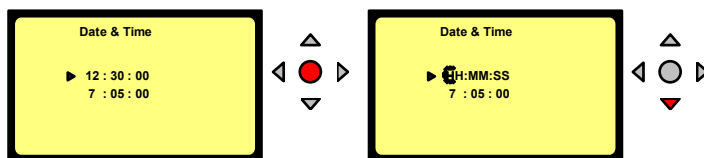


Selecting “**DATE & TIME**” gives access to change the time and date of the real time clock. Once the “**CENTER**” button (13) is pressed, the first digit starts blinking. The number can be modified by pushing the “**UP**” or “**DOWN**” (9 or 11) keys. Pressing the “**RIGHT**” arrow key (12) jumps to the next digit. Once the last number is introduced, the clock starts running. (Hours, Hours, Minutes, Minutes, Seconds, Seconds)

Introducing the date uses the same procedure.

Once the last number is introduced, the date is memorized.

To escape from the sub-menu, press the “**LEFT**” (10) key once.

14.3.4 CARD FORMATTING.

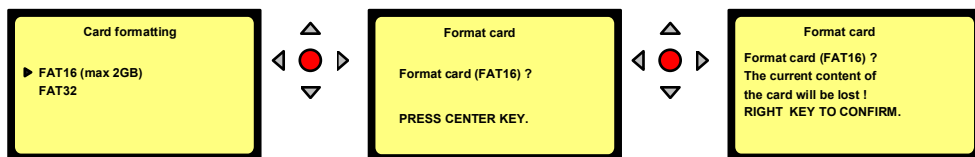

Select “**FAT 16**” or “**FAT 32**” and execute by pressing the “**CENTER**” arrow key (12) and confirm.

Once the formatting is finished, the display returns to the previous menu.


To escape from the sub-menu, press the “**LEFT**” (10) key once.

Important: It is recommended to format the ATA cards or Compact flash cards on the machine and NOT on a PC. The FAT 16 format is limiting the size of a card to maximum 2 GB. Example: A 4GB card formatted with the FAT 16 standard will show a useful capacity of only 2 GB.

The minimum card size for formatting in the FAT 32 standard is 150 MB.

If a card is formatted FAT 32, it will not be recognized anymore on the Ares-P II or Ares-BB.

14.3.5 BATTERY TYPE.

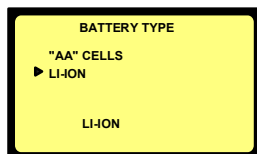


This menu allows selection of the type of battery connected to the Ares-BB⁺.

For dry cells, Ni-mH or Ni-Cd, fitted in the NB-BB box select the mode “**AA**” cells. For the Lithium-Ion pack NB-LIB, select “**Li-ion**”. If the “**Li-ion**” selection is made when using the NB-BB pack, then the machine will shut down before the cells are completely exhausted. If however

“**AA**” cells is selected but a Lithium Ion pack is used, then during record, the machine may suddenly turn off as the pack will be exhausted and go into its internal safety protection mode before the machine shuts down.


14.3.6 PROGRAM SELECT.

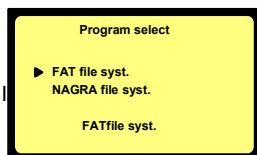

The program select permits to swap between the 2 recording modes “**FAT**” mode (ARES-BB⁺) or “**NFS**” mode (Ares-P or RCX220).

NOTE: This sub menu does not appear if software option #1 is not installed.
To escape from the sub-menu, press the "**LEFT**" key (10) once.


14.3.7 CONTRAST.

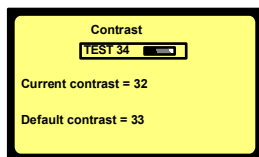

This menu permits to adjust the contrast of the display. Pressing the "**UP**" (9) or "**DOWN**" (11) key changes the current contrast. Pressing the "**CENTER**" key (13) stores the contrast settings as a default value at power on.

To escape from the sub-menu, press the "**LEFT**" key (10) once.

14.3.8 AUTO POWER OFF.

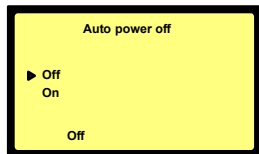


If "**ON**" is selected and the machine is left in the "**STOP**" mode for 10 minutes, it will automatically switch off. During the last 14 seconds of that period, the beep sounds every second. When any key is pressed, the power counter will be reset.

To disable the auto power off, select in the sub-menu "**OFF**" or if it is only for a single power on, press and hold the "**EXECUTE**" key (13)

while switching on the machine.

In the case that the machine is turned on with the auto power disabled, the message "**NO AUTO POWER OFF**" appears during a few seconds.

14.3.9 VERSION.

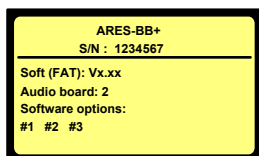


Selecting the "**VERSION**" sub-menu shows the serial number of the recorder as well as the current version of the software installed. The version shown in this picture corresponds to the version for the "**FAT**" mode. Turning on the machine in the "**NFS**" mode will show the "**NFS**" version.


To escape from the sub-menu, press the "**LEFT**" key (10) once.

NOTE: All machines are equipped with "AUDIO BOARD: 2"
#1 means that the MPEG option is installed.
#2 means that the RCX220 emulation option is installed.
#3 means that the EDIT option is installed.

14.4 TEMPLATES.

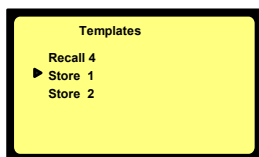


The Ares-BB⁺ can store and recall 4 different templates.

To have an overview of the different sub-menu settings that can be stored, refer to the menu tree at the end of this manual. Only menu settings with a red square against it can be stored. 

To use a template, setup the machine as required, then go to "**TEMPLATES**", select "**STORE 1**" and press the execute key (13). The message "**DONE**" will appear. If now any changes were made in the setup, you can go to "**RECALL 1**" and press the execute key once again. This returns the machine to the settings stored in template 1.


14.5 SETTINGS MENU.

The settings menu gives access to several sub-menus.

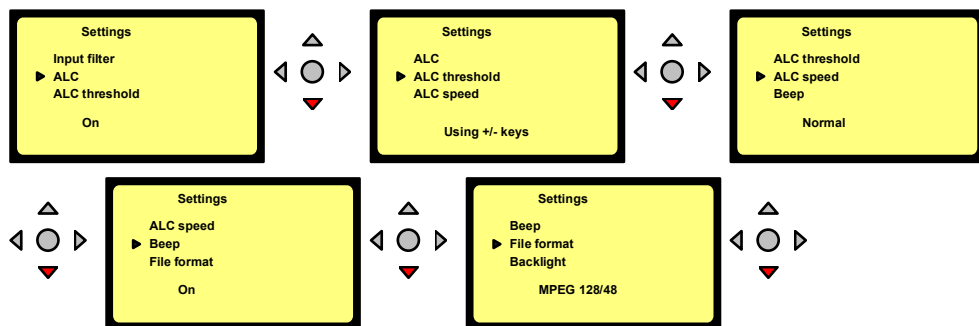


The current setting of each is always shown at the bottom of the display.


14.5.1 INPUT FILTER.

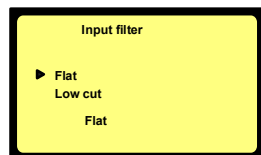

Two possibilities are available: “**FLAT**” or “**LOW CUT**”.

When “**LOW CUT**” is selected, on the main display, the text  will appear next to the battery status.


14.5.2 ALC.

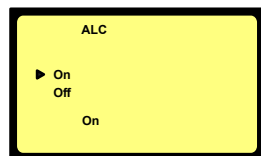

From this sub-menu, the “**ALC**” can be switched “**ON**” or “**OFF**”.

It is highly recommended to switch on the “**LOW CUT**” filter if “**ALC**” is turned ON.

14.5.3 ALC THRESHOLD.

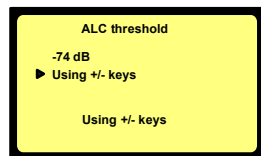


The “**THRESHOLD**” can be adjusted from -104 dB to -74 dB.


In this case the “+”key (8) and the “-”key (7) are disabled. If “**USING +/- KEYS**” is selected, the “+”key (8) and “-”key (7) are enabled during “**STOP**” and “**RECORD**” mode, which allows the “**THRESHOLD**” level to be adjusted without returning in the “**SETTINGS**” menu.

14.5.4 ALC REACTION SPEED.

The “**ALC SPEED**” can be set to a “**FAST**”, “**NORMAL**” or “**SLOW**” reaction time.

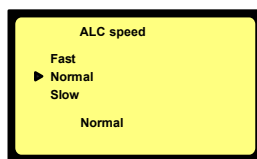


14.5.5 INPUT LEVEL.

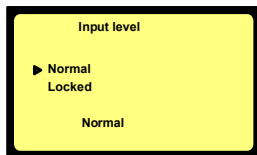


The “**INPUT LEVEL**” can be set to “**NORMAL**”, in this case the input level sensitivity is adjusted by the +/- keys (8 & 7). If the “**INPUT LEVEL**” is set to “**LOCKED**”, the input sensitivity will be fixed at the last value prior to selecting “**LOCKED**”. If in this mode adjustment is attempted, a “closed padlock” symbol appears next to the level indicator. Beware that this setting has no effect if the “**ALC**” mode is “**ON**”.

14.5.6 BEEP.

The beep signal is only available at the output and is not recorded. It can be switched “**ON**” or “**OFF**”.

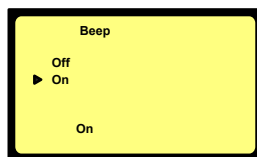


14.5.7 FILE FORMAT.

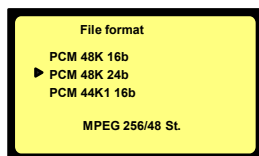


The Ares-BB+ without any soft option can only record in a linear mode (not compressed). If the soft option #1 is installed it includes also the selection of MPEG compression up to 384kb/s. The selection of “24b” means that the audio is recorded through a 20 bit A/D converter and the data format of the file is written in 24 bits.

14.5.8 BACKLIGHT.

The backlight can be set to always “**OFF**”, always “**ON**” or “**AUTOMATIC**”. In the “**AUTOMATIC**” mode, the backlight turns on for 30 seconds, each time a key is pressed.

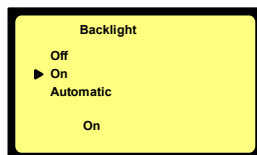


14.5.9 OUTPUT MODE.

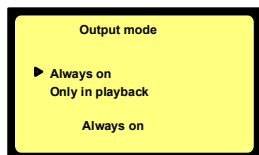

This sub-menu permits to turn on or off the sound to the output connector in the case that a little speaker is used instead of a headphone. “**ALWAYS**” means that the output sound is always present. “**ONLY IN PLAYBACK**” means that the output sound is present only during playback but not present in the record mode or EE mode.

14.5.10 OUTPUT LEVEL.

The “**CURRENT LEVEL**” corresponds to the setting before entering the sub-menu. To modify this level, press the “**UP**” or “**DOWN**” keys (9 or 11). The “**DEFAULT LEVEL**” is the level that has been saved in the memory. To modify the “**DEFAULT LEVEL**” to the value of the “**CURRENT LEVEL**”, press the “**CENTER**” key (13). The default value will be remembered even if the unit loses power.

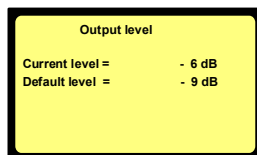

Every time that the output level was modified during playback and afterwards a new record is started, the current value will be reset to the default level.